
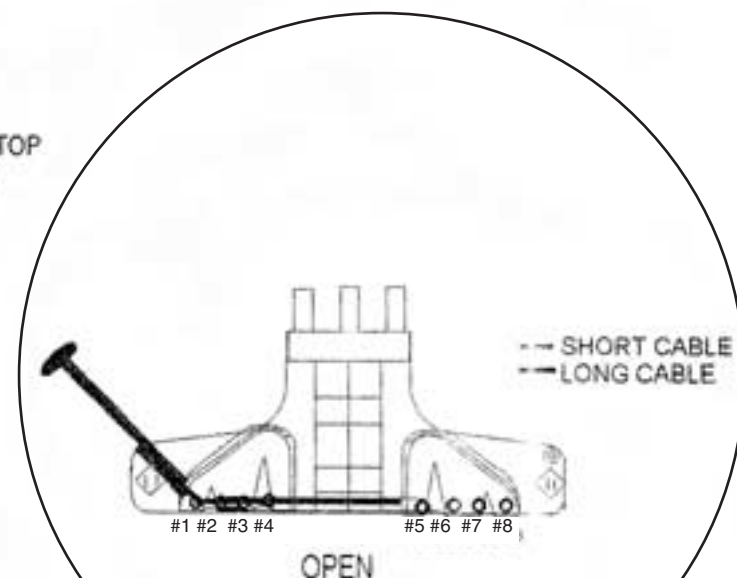


RIPCORD RE-ASSEMBLY

07/ 01

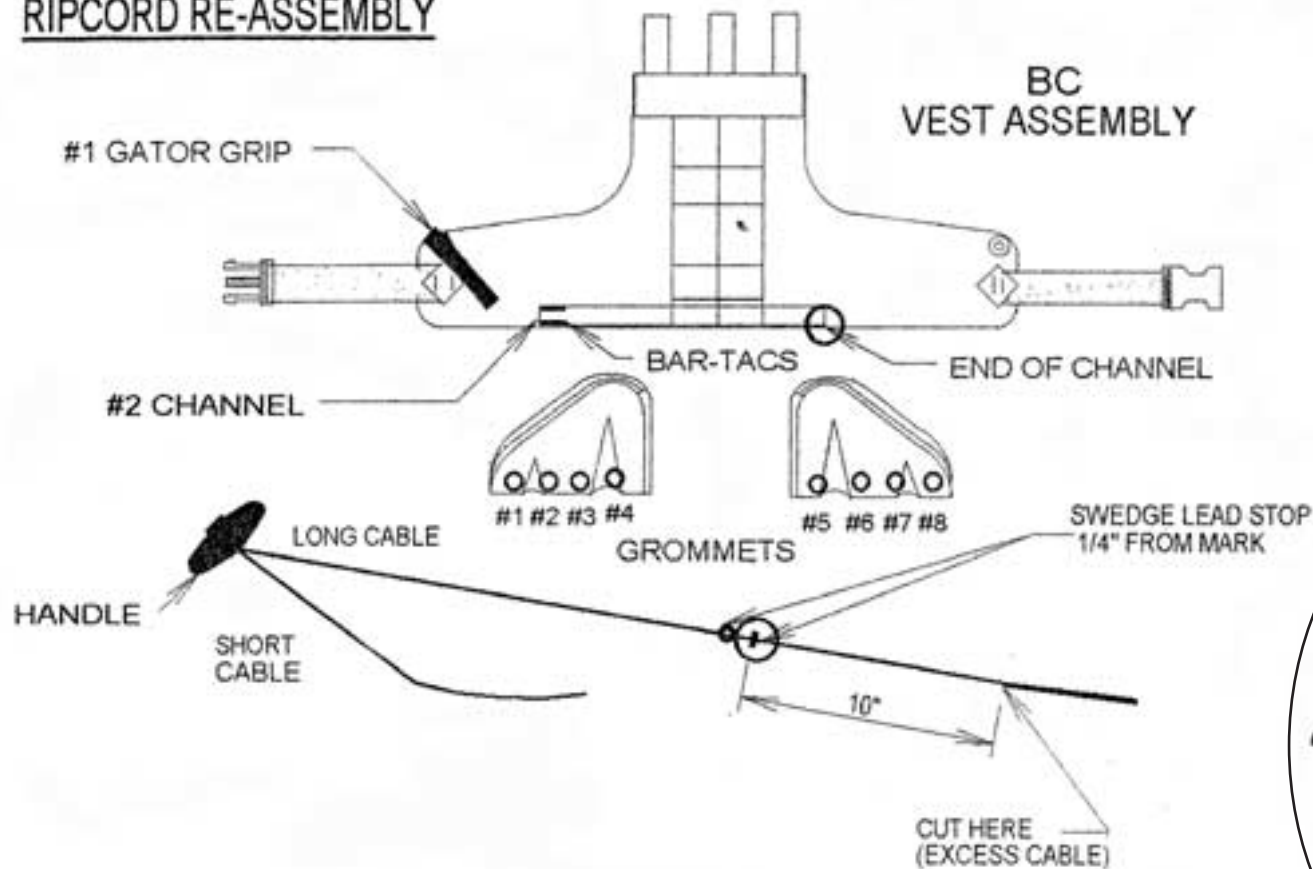

FOLLOW THESE STEPS:

RED CHANNEL UNTIL THE HANDLE IS SECURED IN THE GATOR GRIP.
TAINERS ON THE UNDER-SIDE OF THE WEIGHT POCKET AND INTO THE #2 CHANNEL, MAKING SURE THAT THE

ON THE LONG CABLE, AND CUT THE EXCESS CABLE OFF.
SURE THE LEAD STOP IS JUST
S THE #6 GROMMET.

IE LONG CABLE MUST PASS #5 GROMMET.

1. SLIDE CABLES IN THE GATOR GRIP THROUGH THE
2. FEED LONGER CABLE THROUGH THE WEBBING R
CABLE PASSES BETWEEN THE TWO BAR-TACS.
3. *PULL THE LONGER CABLE UP *
4. MARK WHERE THE LONG CABLE AND THE END OF THE #2 CHANNEL MEET
5. SLIDE THE LEAD STOP ON THE LONG CABLE TO 1/4" (6mm) PAST YOUR MARK.
6. HOLD LEAD STOP IN POSITION AND SWEDGE SECURELY TO THE CABLE *PULL THE VEST INTO A FLAT POSITION, TO MAKE SURE THE LEAD STOP IS JUST INSIDE THE CHANNEL.
7. LOOSEN THE HANDLE FROM THE GATOR GRIP POSITION AND PULL HANDLE UNTIL THE END OF THE LONG CABLE REACHES THE #6 GROMMET.
8. CUT THE SHORT CABLE WHERE THE #4 GROMMET IS LOCATED.
9. CONTINUE TO PULL THE HANDLE UNTIL THE LEAD STOP IS STOPPED BY THE TWO BAR-TACS IN THE CHANNEL.
10. OBSERVE THE LOCATION OF THE ENDS OF THE TWO CABLES. * THE SHORT CABLE MUST PASS THE #1 GROMMET, AND THE LONG CABLE MUST PASS #5 GROMMET.
11. PUSH THE CABLES BACK INTO POSITION AND RE-THREAD EACH POCKET.

NOTE: OMITTING STEPS # 4, 5, & 6 WILL ALLOW THE HANDLE ASSEMBLY TO BE FULLY REMOVED FROM THE SYSTEM.